

FENDER "BANDMASTER" SCHEMATIC MODEL 5E7

E-EE

NOTICE

VOLTAGES READ TO GROUND
WITH ELECTRONIC VOLTMETER
VALUES SHOWN \pm OR $-$ 20%



